

Samsung

S C H - R 3 3 5 C
M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Rd.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel:	1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2010 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?
For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungtelecom.com/support

GH68-27913A

Printed in China

Nuance[®], VSuite[™], and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

Openwave[®] is a registered Trademark of Openwave, Inc.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

Open Source Announcement

Some software components of this product incorporate source code covered under the BSD and etc. And this software is based in part on the work of the Independent JPEG Group.

Component	License
OpenBSD	BSD 2.0
Routines to compress and uncompress top packets	Regents of University of California License
Common L4	BSD 2-Clause License Australian Public License B (OZPLB) Version 1-0
Independent JPEG Group's software	JPEG License
Kernel Source Archive-CMU Mach 3.0	CarnMellon Mach OS License

Routines to compress and uncompress tcp packets

Copyright (c) 1989 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OpenBSD

Copyright (c) 1990 The Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

camellia-rb

Copyright (c) 2006,2007 NTT (Nippon Telegraph and Telephone Corporation).

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY NTT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL NTT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Common L4

Copyright (C) 2007, Open Kernel Labs Inc.

Copyright (C) 2002-2003, University of New South Wales

Copyright (C) 2003-2006, National ICT Australia (NICTA)

Copyright (C) 2002-2004 Karlsruhe University

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Australian Public Licence B (OZPLB) Version 1-0

Copyright (c) 2006, National ICT Australia

All rights reserved.

Developed by: Embedded, Real-time and Operating Systems Program (ERTOS)

National ICT Australia

<http://www.ertos.nicta.com.au>

Permission is granted by National ICT Australia, free of charge, to any person obtaining a copy of this software and any associated documentation files (the "Software") to deal with the Software without restriction, including (without limitation) the rights to use, copy, modify, adapt, merge, publish, distribute, communicate to the public, sublicense, and/or sell, lend or rent out copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimers.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimers in the documentation and/or other materials provided with the distribution.

Neither the name of National ICT Australia, nor the names of its contributors, may be used to endorse or promote products derived from this Software without specific prior written permission.

EXCEPT AS EXPRESSLY STATED IN THIS LICENCE AND TO THE FULL EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS-IS", AND NATIONAL ICT AUSTRALIA AND ITS CONTRIBUTORS MAKE NO REPRESENTATIONS, WARRANTIES OR CONDITIONS OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES OR CONDITIONS REGARDING THE CONTENTS OR ACCURACY OF THE SOFTWARE, OR OF TITLE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, THE ABSENCE OF LATENT OR OTHER DEFECTS, OR THE PRESENCE OR ABSENCE OF ERRORS, WHETHER OR NOT DISCOVERABLE.

TO THE FULL EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL NATIONAL ICT AUSTRALIA OR ITS CONTRIBUTORS BE LIABLE ON ANY LEGAL

THEORY (INCLUDING, WITHOUT LIMITATION, IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHERWISE) FOR ANY CLAIM, LOSS, DAMAGES OR OTHER LIABILITY, INCLUDING (WITHOUT LIMITATION) LOSS OF PRODUCTION OR OPERATION TIME, LOSS, DAMAGE OR CORRUPTION OF DATA OR RECORDS; OR LOSS OF ANTICIPATED SAVINGS, OPPORTUNITY, REVENUE, PROFIT OR GOODWILL, OR OTHER ECONOMIC LOSS; OR ANY SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES, ARISING OUT OF OR IN CONNECTION WITH THIS LICENCE, THE SOFTWARE OR THE USE OF OR OTHER DEALINGS WITH THE SOFTWARE, EVEN IF NATIONAL ICT AUSTRALIA OR ITS CONTRIBUTORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH CLAIM, LOSS, DAMAGES OR OTHER LIABILITY.

SAR Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. The highest SAR values for this model phone were Head: 0.72 W/kg, and Body: 0.40 W/kg.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF

ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	4
Understanding this User Manual	4
Installing and Removing the Battery	6
Charging the Battery	7
Using the Travel Adapter	8
Activating Your Phone	8
Setting Up Voicemail	9
Section 2: Understanding Your Phone	10
Features	10
Closed Phone-Side Views	11
Open Phone-Front View	12
Command Keys	14
Display Screens	16
Section 3: Call Functions	17
Making a Call — Number Entry Dialing	17
Making a Call — Contact Dialing	19
Making a Call — Speed Dialing	19
Making a Call — Quick Search Dialing	19
Making a Call — Voice Dialing	19
Answering a Call	20
Recent Calls	22
Roaming	23
Section 4: Menu Navigation	24
Menu Navigation	24
Navigation Key Shortcuts	25
Navigate Using a Shortcut	25
Section 5: Voice Service	26
Voice-Activating Your Contacts List	26
Voice Settings	27

Section 6: Understanding Your Contacts	29
Your Contacts List	29
Adding a New Contacts Entry	29
Finding a Contacts Entry	32
Editing an Existing Contact Entry	34
Speed Dial Numbers	35
Renaming a Contacts Group	36
Deleting a Contacts Entry	36
Sending a Contacts Entry	36
Memory Info	37
Section 7: Messages	38
Creating and Sending New Messages	38
Message Send Options	41
Receiving New Messages	41
Voicemail	41
Message Folders	42
Erasing Messages	45
Message Settings	45
Section 8: Camera	46
Taking Pictures	46
Camera Options	47
Brightness	50
Section 9: My Folder	51
Buy Ringtones	51
Buy Graphics	51
Camera	51
My Ringtones	52
My Images	52
My Sounds	53
Section 10: Browser	54
Launching the Browser	54
Using the Browser	54

Using Links	54
How the Web Keys Work	55
Section 11: Tools	56
Tools Menu	56
Bluetooth	57
Calendar	59
Memo Pad	61
Alarm Clock	62
World Time	63
Calculator	64
Stop Watch	64
Converter	65
Tip Calculator	66
Section 12: Changing Your Settings	67
Accessing Your Settings	67
Location	67
Display Settings	68
Sound Settings	68
Call Settings	68
Phone Settings	70
Memory Info	70
Phone Info	70

Section 1: Getting Started

This section explains how to start using your phone by activating your service and setting up your voicemail.

Understanding this User Manual

The chapters of this manual generally follow the same order as the menus and submenus in your phone.


Notes and Tips

Throughout this manual some of the text is set apart in notes and tips to emphasize important information or to provide alternative methods and tips for using your phone.

- **Notes** — Provides additional information or alternative methods within a feature description or menu.
- **Tips** — Provides quick or innovative methods for using your phone.
- **Important** — Points out important information that can affect performance, or even risk damaging your phone.

Text Conventions

This manual provides condensed information about how to use your phone. The following terms and icons appear typically in step procedures in place of lengthy descriptions:

- highlight** Use the Navigation key () to move a highlighting effect to a menu item or screen item of interest. Press the outer ring up, down, left, or right.
- select** After highlighting a menu item or screen item, press **OK** to launch, access or save a highlighted menu item or screen field of interest.
- Used in place of “select” in long “drill down” procedure steps.

Example: “...Settings → Call Settings → Call Answer...”

Installing and Removing the Battery

Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.

Important! You must fully charge the battery before using your phone to extend the life of the battery and to avoid damaging the battery.

Battery Cover


To remove and replace the battery cover:

- ▶ To remove, press down at the bottom of the battery cover (1) while sliding it toward the bottom of the phone (2), then lift the cover off.
- ▶ To replace, place the cover over the battery (1) and slide it toward the top of the phone (2) until it clicks into place.



Installing the Battery

- ▶ Match the gold contacts on the battery to those in the phone battery compartment (1), then press the battery down into the phone (2).

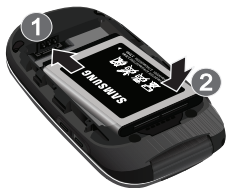

Removing the Battery

Before removing the battery, turn off the phone by pressing and holding **POWER** **END**.


- ▶ Lift the end of the battery up (1) and out of the phone (2).






Charging the Battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Use of other accessories may invalidate your warranty and may cause damage.

Low Battery Indicator

The battery indicator () in the upper-right corner of the display indicates power level. Monitor the battery strength and ensure your battery is adequately charged. If you continue to use your phone without charging the battery, the phone shuts down.

- Five bars () indicate a full charge.
- An empty battery icon () indicates a near empty battery.
- A blinking empty battery icon () and a tone sounding indicate you have two to three minutes before the battery is too low to operate the phone.

Using the Travel Adapter

The travel adapter included with your phone is a convenient, light-weight charger that rapidly charges your phone from any 120/220 VAC outlet.

Important! For connection to an electrical supply not located in North America, you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

1. Plug the large end of the Travel Adapter into a standard 120 VAC or 220 VAC wall outlet.
2. Insert the small end of the Travel Adapter into the charger/accessory connector on the right side of your phone. You must unplug the adapter before removing the battery from the phone during charging to avoid damage.




Important! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Activating Your Phone


Contact your Wireless Carrier and follow their instructions for obtaining service, if necessary. We suggest that you read this guide to fully understand the services your phone supports.

Turning Your Phone On

- ▶ Press . The phone begins searching for a network signal. Once the phone finds a signal, the time, date, and day appear at the top of the display. You're now ready to place and receive calls.

Note: If you are outside of your carrier's coverage or roaming area () the No Service icon () appears at the top of the display. If you cannot place or receive calls, try later when service is available, or try at another location.

Turning Your Phone Off

- ▶ Press and hold  for two or more seconds. Your phone powers off.

Note: If your phone is on and you press  for less than one second, the phone will not power off. This prevents your phone from being turned off accidentally.


Setting Up Voicemail

Voicemail allows callers to leave voice messages that can be retrieved any time.

Note: Once your Voicemail account has been set up, you can use the Voicemail folder (under the Messages menu) to view details of voice messages in your Voicemail box.

- ▶ In standby mode, press and hold  or dial your own mobile number to dial Voicemail. Follow the prompts in the new user tutorial to setup your mail box.

Listening to Voicemail

- ▶ In standby mode, press and hold  or dial your own mobile number to dial Voicemail. After connecting, you will hear your voice greeting. You are prompted to enter your password.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also describes the screen format and the icons that are displayed when the phone is in use.

Features

- Domestic and international voice and text messaging service (available on participating networks).
- High speed data (CDMA 2000 1x Technology)
- Bluetooth® Wireless Technology (see Note)
- Digital Assistant Tools
- Picture (MMS) Messaging
- Text (SMS) Messaging
- Built-in 1.3 Megapixel Digital Camera
- Voice Dial

Note: Your phone supports the wireless headset, hands-free, dial-up networking, Phonebook Access, serial port, file transfer profiles for Bluetooth® wireless technology. Your phone does not support all Bluetooth OBEX profiles.

Closed Phone-Side Views

Features

1. **Camera Lens** — The lens of your built-in camera.
2. **Volume Key** — In standby mode, lets you adjust the incoming call ringer volume. When receiving a call, lets you temporarily mute the ringer.
3. **External Display** — When the phone is closed, the external display provides information about the status of your phone, including incoming calls, status icons, message indicators and contents and signal strength.
4. **Power / Accessory Connector** — Used to connect charging accessories or optional accessory cables to your phone.
5. **Camera Key** — Launches the camera.
6. **Headset Connector** — Used to connect an optional headset (for hands free operation and/or music playback) or an optional TTY device.
7. **Speaker** — Allows you to hear music.



Open Phone-Front View

Features





1. **Earpiece** — Lets you hear ringing and alert tones, alarm tones, and the other parties to calls.
2. **Main Display** — Indicates the status of your phone, including numbers dialed, feature and function screens, status icons, message indicators and contents and signal strength.
3. **Left Soft Key** — Used to access the Main menu from the Idle screen and to navigate through menus and applications. Press the Left soft key to select the function indicated at the bottom left corner of the Main LCD.
4. **Send Key** — Lets you place or receive a call. In standby mode, press the key once to access the recent calls log.
5. **BACK Key** — In text entry mode, deletes characters from the display. In menu mode, returns you to the previous menu or screen. Press and hold to toggle between Vibration mode and Normal mode.
6. **Numeric Keypad** — Use these keys to enter numbers, letters, and symbols.






7. **Star Key**— Toggles capitalization for text input between mixed case (Abc), uppercase (ABC), and lowercase (abc). Capitalization remains as selected until you press the Star key again. In Standby mode, press and hold to enter the (+) character.
8. **Voice Command Key** — Press and hold this key to activate Voice Commands.
9. **Microphone** — Lets the other caller hear you clearly when you are speaking to them.
10. **Pound Key**— In text entry mode, lets you enter spaces between words and characters. In Standby mode, press and hold to turn the vibrate mode on or off.
11. **END Key** — Ends a call. If you press and hold the END key, the power goes On or Off. When you receive an incoming call, press to send the call to voicemail.
12. **Right Soft Key** — Used to access the Browser from the Idle screen and to navigate through menus and applications. Press the Right soft key to select the function indicated at the bottom right corner of the Main LCD.
13. **OK Key** — When navigating through a menu, accepts the highlighted choice in a menu.
14. **Navigation Key** — In Menu mode, lets you scroll through the phone menu options. In Standby mode, lets you access preset functions and one user-defined function.

Command Keys


Soft Keys



Functions for the soft keys are indicated by labels that appear in the display above each soft key. There are two soft keys, Left () and Right (). In standby mode, press the Left () soft key to launch the **Menu**. In standby mode, press the Right () soft key to launch the **Browser**.

OK Key


- In a menu, press  to accept the highlighted selection.
- In camera mode, press  to take a photo or to create a Picture message.
- When the **OK** key function is EDIT, press the **EDIT** key () to edit a Draft message.

Send Key

The **Send** key () is used to answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.




- Press  once to answer calls.
- Enter a number and briefly press  to make a call.
- Briefly press  in standby mode to display a list of recent calls to and from your phone.
- Press  twice in standby mode to call the most recent number.
- Press  to pick up a waiting call. Press  again to switch back to the other call.

BACK Key


The **BACK** key () is used to erase or clear numbers, text, or symbols from the display. You can also use the key to return to a previous menu or to return to standby mode from any menu.

- If you enter an incorrect character, briefly press  to backspace (and delete) the character.
- To erase the entire sentence, press and hold .
- To back up one menu level, briefly press .



End Key

- Press and hold the **End** key () to turn your phone on or off.
- Briefly press  once to disconnect a call.
- Press  to return to standby mode from any menu, or to cancel the last input.


Navigation Key

Use the directional keys on the Navigation key () to browse menus, submenus, and lists. Each directional key also acts as a shortcut to launch applications.

Camera Key

In standby mode, press and hold the Camera key () located on the right side of your phone, to activate the camera. In camera mode, pressing the Camera key () takes a picture.

Display Screens

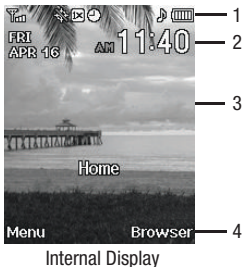

1. The external phone display and the main phone display contain icons that indicate network status, battery power, signal strength and more.


Your phone provides definitions of the display icons in the Icon Glossary:

- In standby mode, press **Menu** → **Settings** → **Phone Info** → **Icon Glossary**.
2. The displays show the current date and time.
 3. The center portion of the main display shows information such as call progress information, messages, and photos.
 4. The bottom line of the main display shows soft key functions according to the current menu. In standby mode, pressing the Left (**Menu**) soft key displays the Main **Menu** and pressing the Right (**Browser**) soft key launches the **Browser**.

Section 3: Call Functions


This section explains how to make and answer calls. This section also includes the features and functionality associated with making or answering calls.

Making a Call — Number Entry Dialing

1. With the phone on, enter the number you wish to call using the keypad.
2. Press  to place the call.

Dialing Emergency Numbers

To place an emergency call:

1. With the phone on, enter 911 using the keypad.
2. Press  to place the call.

You can specify other numbers as emergency numbers using the **Emergency #** settings.

Important!: Emergency number 911 is preset into your phone. You can dial this number almost any time, even when the phone is locked or restricted.


If you call 911, an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important!: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

Important!: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Dialing International Numbers

Call Another Country — Manual Method




1. In standby mode, enter **011** (the three-digit exit code for the United States).
2. Enter the country code for the country that you are calling (for example, **82** for South Korea).
3. Enter the number that you wish to call, then press .

Note: Puerto Rico and Canada are on the North American dialing plan. Making calls to Puerto Rico and Canada is similar to making calls within the United States, no unique country codes are necessary.

Manual Pause Calling

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

To manually call a number with pause(s) without storing it to your Contacts:

1. Enter the number you wish to call.
2. Press the **Options** soft key. A pop-up menu containing the following options appears in the display:
 - **2-Sec Pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits. **P** appears in the display.
 - **Wait** — A hard pause stops the calling sequence until you press . **W** appears in the display.
3. Highlight the desired pause option.
4. To enter the highlighted pause into your number sequence, press .
5. After entering the numbers and characters you want, press .

Making a Call — Contact Dialing

You can store phone numbers and contact names in your Contacts list. To call one of your Contacts, do the following:

1. Press the **Menu → Contacts → Find**. The Find screen with your Contacts list appears in the display.
2. In the **Go to** field, enter the first few letters of a Contacts list entry name. The Contacts list displays the first few entries with names matching the letters you entered.
3. Highlight the Contact you wish to call and press **SEND**. For more information, refer to *“Understanding Your Contacts”* on page 29.

Making a Call — Speed Dialing

Speed Dialing lets you quickly and easily dial any contact in your Contacts list by using that contact's location number in the list. You can assign and change location (speed dial) numbers for your contacts. See *“Assigning Speed Dial Numbers”* on page 35.

Making a Call — Quick Search Dialing

While in standby mode, you can use the **Quick Search** feature to find and dial any of your Contacts entries by entering the first few letters of a Contact name. To turn **On** or **Off** the Quick Search function, press **Menu → Settings → Phone Settings → Quick Search**.

Making a Call — Voice Dialing


Your phone includes state-of-the-art voice recognition software that lets you dial numbers using your voice. For more information, refer to *“Voice Service”* on page 26.


Answering a Call


Your phone notifies you of a call in the following ways:

- A ringtone sounds and/or your phone vibrates. Your phone provides seven Master Volume settings including: **Ring Off**, **Vibrate**, **Low**, **Low/Medium**, **Medium**, **Medium/High**, or **High** and/or different preloaded ringtones and sounds to distinguish callers. For more information, refer to “*Sound Settings*” on page 68.
- A phone number (unless blocked by the caller) and a name appear in the display, if the caller's number and name are stored in your Contacts list.
- If the caller can't be identified, **Call from unavailable#**, **Call from restricted number**, or no number appears in the display.
- Your phone continues to notify you of the call until one of the following events occurs:
 - You answer the call.
 - You ignore the call.
 - You mute the ringer.
 - The calling party ends the call.
 - The call is sent to voicemail.

Answering an Incoming Call

- ▶ Press . The ringtone and/or vibration stop and the caller's voice can be heard in the earpiece.

Tip: You can set your phone to automatically answer calls or to answer calls when you press any key but the  key or automatically. For more information, refer to “*Call Settings*” on page 68.

Note: If you set the **Auto Answer** option to any value other than **Off**, the Auto Answer icon () displays.

Adjusting the Call Volume

During a call, press the Volume key () Up or Down until you hear the other party at the desired volume. The Volume key is on the left side of phone.


The In-Use Options Menu

You can access numerous menus and features while in a call.

Note: If the call is disconnected while you are accessing the In-Use Option, the In-Use Option disappears from the display and the phone eventually returns to standby mode.

1. While in a call, press the **Options** soft key to display the following options: Messages, Contacts, Recent Calls, Connect Bluetooth, Send DTMF, Voice Privacy, Location and Speaker On/Off.

The following menu items appear in the display:

2. Select the desired sub-menu or feature.
3. Exit the menu by pressing .

Tip: You can block/restore sound going to the other parties on this call by pressing the **Mute / Unmute** soft key. This can reduce noise on conference calls.

Ignoring a Call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- During an incoming call, press the **Ignore** soft key. The caller is forwarded to your voice mail.

Muting the Ringer

To temporarily mute the Incoming Call ringer when receiving a call, press the **Quiet** soft key. Or, press the Volume key Up or Down.

Note: Muting the ringer does not forward an incoming call to your voice mail.

Recent Calls

The Recent Calls menu stores information about Outgoing, Incoming, and Missed calls. You can also view times for your last call and the time totals for all calls.

Review the Calls Log

1. In standby mode, press **Menu → Recent Calls**.
2. Select one of the following options:
 - **Outgoing Calls:** Your phone retains information about the last 90 outgoing calls and stores them in the Outgoing calls log. You can review the Outgoing calls log for the time and date of a call, as well as other information.

Note: To quickly view your most recent calls, briefly press  in standby mode. Up to 270 of your most recent outgoing, incoming, and missed calls appear in the display.

- **Incoming Calls:** Your phone retains information about the last 90 Incoming calls and stores them in the Incoming call log. You can review the Incoming call log for the time and date of the call, as well as other information.
- **Missed Calls:** Your phone retains information about the last 90 missed calls (calls that were never picked up) and stores them in the Missed call log. You can review the Missed call log for the time and date of the call, as well as other information.
- **All Calls:** You can review all of the calls log entries (outgoing, incoming, and missed calls) for the time and date of a call, as well as other information.
- **Call Timer:** View the duration of your last call, total calls, and calls made during the life cycle of your phone using the Call Timer feature.

Note: Call Timer is not for billing purposes.


- **Data Counter:** View the amount of Transmit data, Receive data, and Total data transmitted or received since the last time you reset the data counters, and the Lifetime amount of data transmitted or received.

Note: Data Counter is not for billing purposes.

Note: Although most data counters can be erased, the Lifetime Data Counter can never be erased.

Roaming

What is Roaming?

Roaming lets you use your Freeform phone when you travel outside of your Wireless Provider's coverage area. The Roaming icon () appears in the top line of the display when Roaming is active, and extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming. Roaming also consumes additional power from the battery requiring more frequent recharging. Contact your Wireless Provider for more information about Roaming.


Section 4: Menu Navigation


This section explains the menu navigation for your phone.

Menu Navigation


Access the menus and submenus in your phone using the navigation key () , the right soft key () , the left soft key () or use a shortcut.

1. In standby mode, press the **Menu** soft key. The Main Menu appears in the display.

Tip: You can launch any of the Main Menus by using a voice command — In standby mode, press the Voice Command key () . The phone prompts, “Say a command.” Say “Go to” followed by a Main Menu name into the microphone. For example, Say “Go to Tools” to access the **Tools** menu.


2. Use the Navigation key to browse through the menus.
3. To enter the menu or sub menu that appears in the display, press .
4. Press the **Back** soft key to return to the previous menu.

Return to the Previous Menu

- Press the Right soft key **Back** to return to a previous menu.
- When **Back** does not appear in the display, press  to return to the previous menu.

Navigation Key Shortcuts

In standby mode, press a navigation key to launch the key's corresponding application.

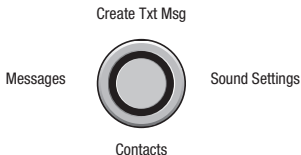

Navigate Using a Shortcut

You can also access menus and submenus using menu numbers. After pressing the **Menu** soft key, press the menu number to go directly to the menu or submenu of your choice. Before you can navigate using a shortcut, you'll need the menu or submenu number that you wish to access.

1. In standby mode, press the **Menu** soft key.
2. Press the number of the menu or submenu for the feature that you wish to access.


Section 5: Voice Service

Nuance is an advanced speech recognition software for your mobile phone that enables you to dial numbers, lookup contact information, and open applications using your voice.

To access your phone's voice settings, do the following:

1. In standby mode, press **Menu → Voice Service → Voice Commands**.

— or —

In standby mode, press and hold .

“**Say a Command**” appears in the display and is pronounced through the speaker, followed by a list of available commands.

2. Speaking clearly, say the command that you want to use. If, after a few seconds, the device does not recognize a command, it prompts you to repeat the command. If, after a few more seconds, it still does not recognize a command, it tells you “**Sorry, no match found**,” and cancels voice service.

Voice-Activating Your Contacts List

When you first start Nuance, it reads your Contacts list and voice-activates all the names stored there. When you add or change contacts, Nuance automatically reloads and voice-activates the entire list.

Ending Calls Before Restarting the Nuance Software

When you use Nuance to make a call, you must end that call before you can use Nuance again.

Voice Settings

Nuance uses choice lists when it is not confident it has correctly recognized a name or number. In this case, it can display a list of up to three possible choices, and prompt you to confirm the correct one.

You can change the way that Nuance uses choice lists with name dialing, digit dialing, and contacts. For each feature, you can choose to always see a choice list (even if there is only one choice), or never see a choice list (even if there are multiple choices). If you leave the setting at “Automatic,” Nuance displays a choice list only when it is not confident it has correctly recognized the name or number.

Choice Lists

- ▶ In standby mode, press **Menu → Voice Service → Voice Settings → Choice Lists** to choose from these options: Automatic, Always On or Always Off.

Sensitivity

- ▶ In standby mode, press **Menu → Voice Service → Voice Settings → Sensitivity** to adjust the Sensitivity to a setting between **Reject More** and **Reject Less** spoken commands or names.

Digit Dialing

- ▶ In standby mode, press **Menu → Voice Service → Voice Settings → Digit Dialing** to adapt and reset according to the sound of your voice when speaking numbers.

Sound

The Sound menu allows you to turn On or Off audio prompts, digit or name audio playback and adjust the speed and volume for name settings.

- ▶ In standby mode, press **Menu → Voice Service → Voice Settings → Sound**.

Voice Launch

To set the key or action that launches Nuance, do the following:

- ▶ In standby mode, press **Menu → Voice Service → Voice Settings → Voice Launch** and select the Voice Launch option you want.

About

This option causes the **About Nuance** screen to appear in the display, showing version and build information about the Nuance software included on your phone.

Section 6: Understanding Your Contacts

This section explains how to manage your daily contacts by storing names and numbers in your Contacts list. Contacts entries can be sorted by name.

Your Contacts List

Your Contacts list can store up to 1000 entries, with each contact having up to five associated phone numbers, two E-mail addresses, and a picture ID.

Each phone number can be up to 32 digits in length, including hard pauses and 4-sec pauses. Contact names can be up to 32 characters in length. You can also specify a memory location for each entry, and you can restrict access to the Contacts list to prevent unauthorized use.

Open Your Contacts List



1. In standby mode, press **Menu → Contacts** to choose from the following options: Find, Add New Contact, Speed Dial, Group and Memory Info.
2. Select the Contacts sub-menu or option of your choice.

Adding a New Contacts Entry

You can add an entirely new entry to your Contacts list or add information to an existing entry.

Using the Add New Contact Option

1. In standby mode, press **Menu → Contacts → Add New Contact**. The **Add New Entry** screen appears in the display with the **Name** field highlighted.
2. Enter a name or phrase to associate with the type using the keypad.
3. Use the **Up** and **Down** navigation keys to highlight each field.
4. Enter a phone number (**Mobile**, **Home**, **Work**, or **Pager**) or an E-mail address (**E-mail**) for the new Contacts entry.

5. If desired, assign the new Contact to a **Group**. This lets you send messages to and find this contact and other related contacts according to the group designation.
6. If desired, select a unique **Ringtone**.
7. You can enter a **Fax** number.
8. If desired, select an identifying image by highlighting the photo ID field and pressing the **Set** soft key. The **My Images** screen display. For more information, refer to “*My Images*” on page 52. Select an image and press **OK** (.
9. Press **SAVE** () to save the new Contacts entry.

Storing Number from a Calls Log

You can store numbers from the Calls logs to your Contacts.

1. In standby mode, press **Menu → Recent Calls**.
2. Select from the following Calls logs: **Outgoing, Incoming, Missed, or All Calls**. Highlight the number you wish to store in **Contacts**.
3. Press the **Options** soft key. The following options appear in the display: Save, Erase, Lock/Unlock, Erase All and View Timer.
4. Select **Save**. The Create New and Update Existing options display. Make your selection to store your number.

Creating a new Contacts entry

5. Select **Create New**. The following (number type) icons appear in the display:



Mobile



Home



Work




Pager



Fax

6. Select the number type that matches your new entry. The **Add New Entry** screen appears in the display with the number being save populating the selected number type field. For more information on creating a new Contacts entry, see *“Using the Add New Contact Option”* on page 29.

Adding the number to an existing Contacts entry

7. Use the navigation keys to highlight **Update Existing**, then press . The **Update Existing** screen appears in the display showing your current Contacts list and the **Go To** field.
8. Enter the first few characters of the Contacts entry name you wish to save your number to. For more information on finding a Contacts entry, see *“Using the Add New Contact Option”* on page 29.
9. Select the desired Contacts entry. The following (number type) icons appear in the **Update Existing** screen:



Mobile



Home




Work



Pager



Fax

10. Select the appropriate unassigned number type. The **Edit Contact** screen appears in the display.
11. Make any added changes you wish to the Contacts entry. For more information, refer to “*Editing an Existing Contact Entry*” on page 34.
12. Press **SAVE** () to save the entry.


Finding a Contacts Entry

Voice Method

Use the Voice Service to view contact information for any named contact stored in your Contacts list by saying the name.

Note: The Voice Service **Contacts** command shows the requested contact information in the display but does not dial any phone numbers for the contact.

To look up information for a specific contact:


1. In standby mode, press and hold  for **Voice Service**.
“**Say a Command**” appears in the display and is pronounced through the speaker.
2. Say “**Lookup.**”
The system prompts you to “**Say the name.**”
3. Speak clearly and say the full name of the person you want to call, exactly as it is entered in your contact list.
4. Say “**Yes**” to confirm the name or “**No**” to hear the next name, or use the keypad to select the correct name from the list.
5. The contact information for the name you selected appears in the display.

Keypad Methods

Find by Name

If you have stored a named contact in your Contacts list, Find lets you locate the entry quickly.

1. In standby mode, do one of the following:
 - Press the **Down** navigation key (Contacts shortcut) and select **Find** menu.
 - Press **Menu → Contacts → Find**. The **Find** screen appears in the display with an alphabetical list of Contacts showing.
2. Enter the first few characters of the name of the contact as it appears in your Contacts list.

Example: If you saved a contact name as “Robert Smith”, begin your search for that contact by pressing  for “R”.

Group

This option lets you find a Contacts list entry with a specific Group name.

1. In standby mode, Press **Menu → Contacts → Group**. The **Group List** screen appears in the display.
2. Select the group you wish to browse.
3. Highlight the desired Contact(s) entry in the current Group, press the **Options** soft key and select **Send Txt Msg** or **Send Pic Msg**.
4. Select the desired option to enter that option sub-menu.



Search by Number

This option allows you to find a Contacts list entry by searching on one of the contact's phone numbers.


1. In standby mode, enter the first few numbers of the Contacts list entry you wish to find (such as the area code or area code and exchange — for example, 888-987).
2. Press the **Options** soft key to choose from the following menu options: Search, 2-Sec Pause, Wait, Send Txt Msg or Send Pic Msg.
3. Select the **Search** option. The **Find** screen appears in the display listing all phone numbers in your Contacts list that contain the entered digits.
4. Highlight the desired Contacts entry.

Editing an Existing Contact Entry

Once stored in the Contacts, an entry can be changed quite easily.

1. Find the desired entry in the Contacts list. For more information, refer to *"Finding a Contacts Entry"* on page 32.
2. Press the **Edit** soft key. The **Edit Contact** screen appears in the display with the contact name highlighted.
3. Highlight a number stored in this contact entry.
4. To backspace and delete numbers, press . To clear all numbers in the highlighted field, press and hold .

Note: You can also add numbers to the entry, assign it to a Group, and add other information.



5. When you're finished editing the entry, press **SAVE** (). Your changes are saved and a confirmation message appears in the display.

Assigning Speed Dial Numbers

When you add or edit an entry to the Contacts list, you have the option of assigning a Speed Dial number using the Options pop-up menu or of returning to the Contacts menu and using the Speed Dial option. You can also change a contact's Speed Dial number.



1. Find and highlight the desired entry in the Contacts list.
2. Press the **Edit** soft key.
3. Highlight a number stored in this Contact entry.

Note: If a Contact has more than one stored number (such as **Home** and **Office**), you can select which of these numbers your phone dials when you speed dial that Contact.

4. Press the **Options** soft key.
5. Select **Set Speed Dial / Remove speed dial**. If a speed dial number has been set previously, you can remove it by pressing .
6. Select an unassigned Speed Dial number to assign it to the selected Contact.
7. Press the **Yes** soft key to assign the selected Speed Dial number.
8. Press  to save the new Speed Dial number assignment.


Speed Dial Numbers

You can assign and change Speed Dial numbers for Contacts entries.

1. In standby mode, press **Menu** → **Contacts** → **Speed Dial**.
2. Highlight a Speed Dial number and press **SET** (.
3. Enter or highlight a Contact entry, then press .
4. To save the new setting, press the **Yes** soft key. To discard the new setting, press the **No** soft key.

Renaming a Contacts Group

Use this option to rename a Group in your Contacts list.


1. In standby mode, press **Menu** → **Contacts** → **Group**.
2. Highlight the Group (other than **No Groups**) that you wish to rename, then press the **Options** soft key and select **Rename**.
3. Enter a new Group name using the keypad and press  to save the changed group name.


Deleting a Contacts Entry

1. Find and highlight the desired entry in the Contacts list.
2. Press the **Options** soft key and select **Erase**.
3. To erase the selected Contact entry, press the **Yes** soft key. To keep the selected Contact entry, press the **No** soft key.

Sending a Contacts Entry

Use the Send Name Card With Bluetooth option to send one or more selected Contacts entries to another compatible phone or other device over a Bluetooth connection.

1. Find and highlight the desired entry in the Contacts list.
2. Press the **Options** soft key, then select **Send Name Card Via Bluetooth**.
3. Highlight another Contacts entry you wish to send and press **MARK** () to mark the entry for sending. Repeat this step for all other Contacts entries you wish to send.

4. When you have marked all the entries you wish to send, press the **Done** soft key. The **Choose Device** screen appears in the display.
5. Use the **Up** and **Down** navigation keys to highlight the name of the receiving device, then press . Your phone automatically connects with the other device and sends the selected Contact entries.

Note: For information on turning off the Bluetooth connection, see “*Turn Bluetooth On/Off*” on page 57.

Memory Info

The Memory Info menu allows you to view the Total number of Contacts that can be stored in your phone memory (up to 1000), the Used number that you currently have stored and the number remaining Free for Contacts that can be added.

- ▶ In standby mode, press **Menu → Contacts → Memory Info**.



Section 7: Messages

This section explains how to create, send, receive, and view different types of messages. This section also describes the features and functionality associated with messaging.

Creating and Sending New Messages




This section guides you through procedures for creating and sending text and pictures.

Creating and Sending a Text Message

1. In standby mode, press the **Menu** → **Messages** → **Create Message** → **Text Message**. The **Create Txt Msg** screen appears in the display showing the **To** list.
2. Press the **Add** soft key to select from Contacts, Groups and Recent Calls lists.
3. Address your message by selecting from your lists and entering number(s) or E-mail address(es) of message recipient(s) and press .
4. Enter the text for your message using the keypad.
5. At any point while composing a message, you can set message send options by pressing the **Options** soft key.
6. Once you're finished composing your message, press **SEND** (.







Creating and Sending a Picture Message

1. In standby mode, press the **Menu** → **Messages** → **Create Message** → **Picture Message**. The **Create Pic Msg** screen appears in the display showing the **To** list.
2. Press the **Add** soft key to select from Contacts, Groups and Recent Calls lists.

3. Address your message by selecting from your lists and entering number(s) or E-mail address(es) of message recipient(s) and press .
4. After addressing your picture message, the **Subject** field becomes highlighted.
5. If desired, enter the Subject text using the keypad.
6. Press the **Down** navigation key. The **Text** field becomes highlighted.
7. Enter the message text using the keypad.
8. To set message send options, press the **Options** soft key. For more information, refer to “*Message Send Options*” on page 41.
9. To add a picture to the message, highlight the **PIC** field.
10. Press the **Pictures** soft key to see thumbnail images of your photos.
11. Highlighted the photo you wish to add and press . The **Create Pic Msg** screen appears in the display with the selected photo in the **PIC** field.
12. Press the **Down** navigation key. The **Sound** field becomes highlighted.
13. To add a sound file to your message, press the **Sounds** soft key. The MMS Tone window displays showing menu options, My Ringtones and My Sounds, with preloaded options. The My Sounds menu provides the Record New option to create your own recording.
14. Record a new sound file or select a listed sound file.
15. Once you're finished composing your picture message, do one of the following:
 - Press **SEND** () to send the message.
 - Press the **Options** soft key. For more information, refer to “*Message Send Options*” on page 41.

Send Picture Messages in Camera Mode

Picture messages can be sent to recipients with compatible phones or devices. You can even accompany a Picture message with a voice memo or preloaded sound.

1. In standby mode, press and hold the Camera key (). The camera viewfinder screen appears in the display.
2. Using the display as a viewfinder, when the image that you wish to send appears in the display, press **TAKE** () to take a picture.
3. Press **Send** () to save the picture and begin delivery process. The **Create Pic Msg** screen then displays.
4. Enter the phone number or E-mail address of the recipient of the Picture message, then press .
5. The **Subject** field appears in the display. Enter a subject for the Picture message using the keypad.
6. Press the **Down** navigation key until the **Text** field is highlighted. Enter text.
7. If you wish to insert a sound into your Picture message, use the Down navigation key to highlight the **Sound** field and follow the prompts.
8. Press the **Options** soft key to complete message text and message send options.
9. Highlight an option, then press  to invoke it.
10. Press  to send the message. “**Connecting...**” followed by “**Sending Message**” appear in the display and a progress bar indicates the send status.

Message Send Options

You can set priority, validity, and other options before you send a message. The type of composed message and the highlighted message field determine the options that appear in the Send Options list.

1. After composing a Text or a Picture message, press the **Options** soft key.
2. Select a desired option and a value for that option.

Receiving New Messages

When you receive a message in standby mode, your phone displays the number of new voicemails received or the number of messages received. You can choose from the options: **View Now** or **View Later**.

Receive Calls and Messages While in a Call

When you receive a call while in a call, your phone displays **Call Waiting**, the number of the incoming call and the name of the caller, if listed in your Contacts. You can end your current call and answer the incoming call or ignore the incoming call and send the call to voicemail. Your phone displays the number of new voicemails received while you are still in your call.

When you receive a message while in a call, your phone displays the number of new messages received. You can choose from the options: **View Now** or **View Later**. If you wish to view your message while in a call, select the **View Now** option.


Voice Mail

Voice mail allows callers to leave voice messages in your voice mailbox, and lets you review, play, and delete your voice messages any time you are in your Carrier's network coverage area.

Voice Mail Setup

Before callers can leave voice mail messages, you must first set up your account. For more information, refer to *"Setting Up Voice Mail"* on page 9.




Checking your Voicemail

1. In standby mode, press and hold  until you're connected to your Wireless Carrier's voicemail system. A recorded message prompts you for a password.
2. Enter your password, then follow the recorded prompts, to listen to your voice message(s), change administrative options, and so on.

Message Folders

Inbox

Received messages of all types (except Voicemail) are stored in the Inbox.

1. In standby mode, press **Menu** → **Messages** → **Inbox**, to open the Inbox folder.
2. Highlight a message, then do one of the following:
 - To delete the message, press the **Erase** soft key.
 - To view the highlighted message, press **OPEN** () then proceed to Step 3.
 - To access other options, press the **Options** soft key.
3. While viewing a selected message, do one of the following:
 - To delete the message, press the **Erase** soft key.
 - To compose and send a message to the sender of the highlighted message, press **REPLY** ()
 - Press the **Options** soft key to choose from options.
 - To return to the **Inbox** list, press .

Messages and Lock Mode

Your phone can still receive messages while in Lock Mode. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code. (For more information, refer to “*Phone Settings*” on page 70.)

Outbox

Your phone stores outgoing messages in the Outbox, regardless of whether the message was successfully sent to, or received by, the addressee.

Tip: Verify whether and when a message or E-mail was successfully received by enabling the **Delivery Ack** message send option. (For more information, refer to “Send Picture Messages in Camera Mode” on page 40.)

1. In standby mode, press **Menu** → **Messages** → **Outbox**. A list of your outgoing messages appears in the display.
2. Highlight a message, then do one of the following:
 - To delete the message, press the **Erase** soft key.
 - To view the highlighted message, press **OPEN** (ⓘ) then proceed to Step 3.
 - Press the **Options** soft key. Select an option to perform the function for that option.
 - To return to the **Messages** menu, press **C**.
3. While viewing a selected message, do one of the following:
 - To delete the message, press the **Erase** soft key.
 - To resend a message to the original addressee, press **RESEND** (↻).
 - Press the **Options** soft key. Select an option to perform the function for that option.
 - To return to the **Outbox** list, press **C**.


Drafts Folder

Messages in the Drafts folder are those that have been composed but never sent. You can return to the Drafts folder at any time to view, edit, or send a draft message.

1. In standby mode, press **Menu** → **Messages** → **Drafts**. A list of your draft messages appears in the display.
2. Use the navigation keys to highlight the message that you wish to edit, then do one of the following:
 - To delete the message, press the **Erase** soft key.
 - To view the highlighted message, press **EDIT** (Ⓔ) then proceed to edit the desired fields.
 - Press the **Options** soft key. Select an option to perform the function for that option.
 - To return to the **Messages** menu, press **C**.
3. If you press **EDIT** (Ⓔ) in the **Text** screen/field, do one of the following:
 - To change text options, press the Left soft key.
 - To send the message, press **SEND** (Ⓔ).
 - Press the **Options** soft key.
4. Once you're finished composing your message, do one of the following:
 - To send the message, press **SEND** (Ⓔ).
 - To exit the message, press **END**. You are prompted to save to the Drafts folder.

Voicemail

New voice messages in your voice mailbox are logged in the Voicemail folder of the Messages menu. Open the Voicemail folder to view the Callback # (if available), Urgency, and other details of new voicemail messages.

1. In standby mode, press **Menu → Messages → Voicemail**. A Voicemail status screen indicating the number of new messages in your voice mailbox, their urgency, and any callback numbers appears in the display.
2. Press  to call your voice mailbox and listen to your voice messages.

Note: In standby mode, you can press and hold  to dial your voice mailbox.

Erasing Messages

You can erase all of the messages in each folder or in all of your message folders from one convenient location.

1. In standby mode, press **Menu → Messages → Erase Messages**.
2. Select the folder containing the messages you wish to delete.
3. Select the message(s) to delete. To delete all selected messages, press the **Yes** soft key. Press the **No** soft key to cancel.

Message Settings

The Msg Settings options let you define numerous message settings such as ringer types and save options.

In standby mode, press **Menu → Messages → Msg Settings** to choose from the following options:

- **General:** Allows you to choose from these options: Auto Save, Auto Erase, Quick Text, Voicemail #, Entry Mode, Callback #, Signature and Reminder.
- **Text Message:** Allows you to turn On or Off the Auto Scroll option.

Section 8: Camera

Use your phone to take full color digital pictures, display them on your phone's vivid color display, and instantly share them with family and friends. It's fun, and as easy to use as a traditional point-and-click camera. This section explains how you can do the following:


- Take pictures with your phone's built-in digital camera.
- Send your pictures to others in Picture messages.
- Set the several options associated with the camera that help you take crisp, clear pictures.

Taking Pictures

To take a single picture using the current camera settings, do the following:

1. In standby mode, press and hold the Camera key () on the right side of the phone.

Note: You can also activate the camera by pressing **Menu → My Folder → Camera**.

2. The following options appear:
 - **Gallery** — allows you to view your stored pictures.
 - **TAKE** — allows you to take a picture.
 - **Options** — allows you to adjust camera settings. See “*Camera Options*” on page 47.
3. Using the display as a viewfinder, point the camera lens on the back of your phone at your subject. When the image that you wish to capture appears in the display, press **TAKE** (.
4. To save the picture to memory, press the **Save** soft key. Press **Cancel** to cancel.

Camera Options

The Camera Options let you temporarily adjust default camera settings to suit available lighting, the subject of the photo, or the purpose of the photo, for the current camera session.





To access Camera Options, do the following:

1. In camera mode, press the **Options** soft key. The Camera Options menu appears in the display, containing submenus.
2. Select a submenu, then select a preferred value.

The following sub-sections describe camera options and available values.

Shot Type

Shot Type lets you take multiple photos or shots in succession at the touch of a key and/or add colorful frames to your photos.

- In camera mode, press the **Options** soft key, then highlight the **Shot Type** icon ( /  /  / ). The following values appear in the camera screen:

- **Single Shot** — Lets you take 1 photo at a time.
- **Series Shot** — Lets you take a series of 5 photos.
- **Mosaic Shot** — Lets you take a mosaic photo of 4 or 9 shots (2x2 or 3x3).
- **Frame Shot** — Lets you select a colorful frame to include around your photos (use the Left and Right navigation keys to preview available frames).

Resolution

Resolution lets you change the clarity (in pixels) and size (in bytes) of your pictures.

- In camera mode, press the **Options** soft key, then highlight the Resolution setting to select a value.






Night Shot


Night Shot lets you take pictures in low light conditions.

- ▶ In camera mode, press the **Options** soft key, then highlight  to select the Night Shot setting. Select **Off** or **On**.

Self Timer

Self Timer lets you delay taking a picture long enough to let you join others in a picture.


- ▶ In camera mode, press the **Options** soft key, then highlight  /  /  /  to select from the following settings: Off, 3 Sec., 5 Sec., or 10 Sec and press **OK**  to save your setting.

The next time you press , the countdown Self Timer indicates the time remaining before the camera takes the picture. The phone reads the countdown timer value to you beginning with ten, five or three and continuing to zero, when the picture is taken.

Tip: To stop the countdown timer without resetting it, press .


Quality






You can affect how much your photo is compressed, reducing the overall size of the photo (not to be confused with resolution).


- ▶ In camera mode, press the **Options** soft key, then highlight the desired Quality, **Fine**, **Normal**, and **Economy**. Press **OK**  to save your setting. **F**, **N** or **E** appears in the camera screen to indicate your selection.

White Balance

White Balance allows you to adjust picture quality according to available light.



- In camera mode, press the **Options** soft key, then highlight Auto, Sunny, Cloudy, Tungsten or Fluorescent and press **OK**  to save your setting.

One of the following icons displays on the camera screen to represent your selected setting:  /  /  /  / .

Each option, as you highlight it, shows the effects it has on a picture. Select the desired White Balance value. The camera viewfinder screen appears in the display with your selected White Balance value applied. The next time you press , the camera applies your selected White Balance value to your picture.

Color Effect


Choose from six available Color Effect settings to change the look of your pictures. The selected color effect previews in the display before you take the picture.

- In camera mode, press the **Options** soft key, then highlight . Highlight one of the settings that appears in the display: Normal, Black&White, Sepia, Negative, Green and Aqua and press **OK**  to save your setting. When you take your next picture, the camera applies your selected Color Effect value to your picture.

Note: Choose **Normal** to disable Color Effects.

Settings


When you change Camera Settings values, your changes are saved for future camera sessions, unlike changes to Camera Options. To restore Camera Settings to their default values, select **Reset Settings**.

- ▶ In camera mode, press the **Options** soft key, highlight . Select from the following options:
 - **Icon Display** — Choose Display All, Guideline or No Icons.
 - **Metering** — Choose Matrix, Center-weighted or Spot.
 - **View Mode** — Choose whether to display image in Landscape or Portrait view.
 - **Shutter Sound** — Choose whether to hear a shutter sound when you take a photo: Off, Shutter1, Shutter2 or Shutter3.
 - **Auto Save** — Elect to save your photo automatically or manually.
 - **Reset Settings** — Choose to restore Camera Settings to their default values.

Brightness

Brightness lets you temporarily lighten the pictures you take. Increasing the Brightness (-4 – +4) lightens your pictures (0 is normal).


- ▶ In camera mode, press the Navigation key **Left** or **Right** to adjust the Brightness. The screen image lightens or darkens to show the affects of your changes.

The next time you press , the camera takes a lighter or darker picture according to your selected Brightness setting.

Section 9: My Folder

The My Folder menu allows you to connect to your Browser to buy ringtones and graphics, to access your camera to take pictures and view your saved images and to access your preloaded ringtones and your downloaded ringtones and your own recordings.

- ▶ In standby mode, press **Menu → My Folder**. The following submenus display: Buy Ringtones, Buy Graphics, Camera, My Ringtones, My Images and My Sounds.

Tip: To launch the My Folder menu using a voice command — In standby mode, press and hold the Voice Command key (). The phone prompts, “Say a command.” Say “Go to My Folder” into the microphone.

Buy Ringtones

Select the Buy Ringtones application to launch your Browser and follow the onscreen prompts to shop for Ringtones.

Buy Graphics




Select the Buy Graphics application to launch your Browser and follow the onscreen prompts to shop for Graphics.

Camera

Select Camera to launch and set up your phone's camera. For more information, refer to “Camera” on page 46.



My Ringtones

Select My Ringtones to record new sounds or choose from preloaded sounds and assign Ringtone (calls), Contact ID, and Alert Tone. You can also add sounds to a picture message.

1. In standby mode, press **Menu → My Folder → My Ringtones**.
2. Use the Navigation key to highlight a particular ringtone.
 - Press the **Set As** soft key to assign the highlighted ringtone. The following options appear in the display: Ringtone, Contact ID and Alert Tone.
 - Press  to **PLAY** the ringtone.
 - Press the **Info** soft key to view the title of the highlighted ringtone, the file size and the file type.
3. To return to the previous menu, press . To return to standby mode, press .



My Images

My Images lets you choose the pictures that appear in your phone's display while in standby mode (Wallpaper) and as picture IDs for your contacts.

1. In standby mode, press **Menu → My Folder → My Images**. Your images display with the following soft key options:
 - **Camera**: Launches your Camera.
 - **VIEW**: Enlarges the selected picture.
 - **Options**: Allows you to choose from the following options: Send, Set As, Erase Images, Rename, Lock/Unlock, Slide Show and Image Info.
2. To return to the previous menu, press . To return to standby mode, press .


My Sounds

My Sounds lets you choose from preloaded sounds or make your own recordings to send with messages or to customize your phone.


1. In standby mode, press **Menu** → **My Folder** → **My Sounds**.
2. Select a sound from the list of preloaded sounds or from your own recordings.
3. Press the **Options** soft key to see the following options:
 - **Send**: Opens a message window.
 - **Set As**: Allows you to set the selected sound as a ringtone, a contact ID or an alert tone.
 - **Rename**: Allows you to rename your sound files.
 - **Lock/Unlock**: Allows you to lock and unlock your sound files.
 - **Erase All**: Allows you to erase all sounds when you confirm **Yes** or **No**.
 - **Sound Info**: Allows you to view the title of the sound, the file size and the file type.
4. To return to the previous menu, press . To return to standby mode, press .

Section 10: Browser

This section outlines how to launch your Browser, how to navigate to other pages on the Web, and how the keys on the keypad are used with the Web application.

You can surf the Web and download ringtones and wallpapers using your phone. When your phone connects to the Internet, the service indicator icon with an arrow () appears in the display.

Launching the Browser

1. In standby mode, press the Right soft key to launch the **Browser**. A list of categories, each representing one or more web sites, appears in the display.
2. Highlighted the desired category, then press the  soft key to enter the category list.



Exit the Browser

- To exit the Browser, press .


Using the Browser

When you use your Browser to access the Web, some of the keys operate differently than during a normal phone call. You can act upon options or links by using the soft keys.

Soft Keys

The bottom of the display shows browser commands above the **Left** () and **Right** () soft keys used to execute the commands. The soft keys change their function depending on the application.

Using Links

Links have several purposes, such as jumping to a different page, to a different site, or even initiating a phone call. Links are shown inside of brackets ([]). You can normally press  to select a link when it is highlighted.

How the Web Keys Work

The following table lists the Web keys and their functions.

- **Navigation keys** — Use to browse lists and options.
- **BACK Key** — Press to go back to a previous page. Press once to back one page. Press and hold to go back to home page. Press to clear the last number, letter, or symbol entered. Press and hold to completely clear the display.
- **Shift Key** — Press before entering text to enable uppercase characters.
- **Space Key** — Press to insert a space when entering text.
- **Number 1 thru 9** — Use the number keys to select items in a menu if they are numbered.
- **End Key** — Press to exit the Web and return the phone to standby mode.
- **Left Soft Key** — Press to activate the command that appears above it in the display.
- **Right Soft Key** — Press to activate the command that appears above it in the display.

Section 11: Tools

Tools Menu

Tools is a suite of Personal Information Manager (PIM) applications such as a Calendar, and Memo Pad that run on your phone. You can use your phone to schedule events, set reminders, perform calculations, and more.

Opening Tools Menu

1. In standby mode, press **Menu → Tools**. The following sub-menus display:
 - **Bluetooth** — Lets you access Bluetooth functions.
 - **Calendar** — Lets you schedule events and set reminders.
 - **Memo Pad** — Lets you store and review useful information.
 - **Alarm Clock** — Lets you set an alarm to go off once, or daily, at a specified time.
 - **World Time** — Lets you view the current time of day or night in another part of the world.
 - **Calculator** — Lets you perform calculations, including addition, subtraction, multiplication, and division.
 - **Stop Watch** — Lets you view the amount of time.
 - **Converter** — Lets you convert currencies (according to the latest rates), length, weight, volume, area and temperature from one system or increment to another.
 - **Tip Calculator** — Lets you quickly calculate service gratuities with a minimum of key presses.

Tip: To launch the **Tools** menu using a voice command — In standby mode, press the Voice Command key () until the phone prompts, “Say a command.” Say “Go to Tools” into the microphone.

2. Select the desired Tools sub-menu.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to enable or disable bluetooth, show the visibility, view and change the device name, show supported profiles and device information.

Turn Bluetooth On/Off

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset. (For more information, refer to “*Bluetooth Settings*” on page 59.)

Accessing Bluetooth




- ▶ In standby mode, press **Menu → Tools → Bluetooth**. The following sub-menus display:
 - **Registered List**
 - **Bluetooth Settings**

Registered List


Registered List provides a list of Bluetooth wireless technology devices previously connected to your handset.

- ▶ At the **Bluetooth** menu, select **Registered List**. The **Bluetooth** screen displays showing a list of devices previously connected to your device.

Add New Device

1. At the **Bluetooth** menu, select **Registered List → Add New Device**.
If Bluetooth is off, you are prompted to “**Turn bluetooth on?**”. Press the **Yes** soft key to turn on Bluetooth.
2. When you phone displays the prompt: “**Place device you are connecting to in discovery mode**” press  to place device in discovery mode. Names of the available devices appear in the display. For more information, refer to the device user manual.
3. Highlight the device you want to pair with your phone.
4. Press **PAIR** () to pair the selected device with the phone. You are prompted to enter the passkey or PIN for the selected device. For more information, refer to the device user manual.
5. Enter the device passkey or PIN and press . You are prompted to verify that you want to connect with the device.

Note: When pairing with another Bluetooth phone, enter whatever passkey you wish. You must, however, enter the same passkey into the other phone when prompted.

6. To connect with the device, press the **Yes** soft key. To bypass connecting with the device, press the **No** soft key.
7. Highlight and press  to select one of the options for connecting: **Always Ask** or **Always Connect**.

Connecting to a Registered Bluetooth Device

1. Power on the registered device and/or move to within 30 feet of it. Your phone should automatically reconnect with the device or prompt you to accept such a connection.
2. If the registered device does not connect automatically, from the Registered List, select the desired device.

Note: If you are unable to connect with the device a pop-up appears in the display. To retry, press the **Yes** soft key.

Bluetooth Settings

1. In standby mode, press **Menu → Tools → Bluetooth → Bluetooth Settings** to see the following options: Enable/Disable, Discovery Mode, Device Name, Supported Profiles and Device Info.
2. Select the desired option to perform the related process.

Calendar

Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.

View an Event

1. In standby mode, press **Menu → Tools → Calendar**.
A calendar appears in the display with the current date highlighted. The month and year also appear.
2. Use the Navigation keys to navigate your calendar and highlight a desired date.
 - To move from one day to another, use the Left/Right navigation keys.
 - To move from one week to another, use the Up/Down navigation keys.
 - To view previous months, press the Volume key Up.
 - To view future months, press the Volume key Down.
 - To access other options, press the **Options** soft key while viewing the calendar.
3. Open the highlighted date by pressing . A list of scheduled events appears in the display.
4. Select the desired event. Information for the selected event appears in the display.

Add a New Event

1. In standby mode, press **Menu → Tools → Calendar**.
A calendar appears in the display with the current date highlighted. The month and year also appear.
2. Highlight the date of the new event.
3. Press the **Add** soft key. The **New Event** screen appears in the display.
4. To select and enter details of the event, use the Navigation key and the keypad.

5. Enter the start and End dates and times for the event using the keypad. Enter the dates and times for the event using 2 digits for day, month, hour, and minute entries. Use 4 digits for year entries.
6. To change between **AM** and **PM**, use the Left and Right navigation keys.
7. When you're finished entering the dates and times, to highlight the **Alert** field, use the **Up** and **Down** navigation keys. To select a type of alert, use the Left and Right navigation keys.
8. Highlight the **Reminder** field, and set the Reminder to Off or to select a reminder interval using the Left and Right navigation keys.
9. Highlight the **Alert time** field, use the **Up** and **Down** navigation keys, then select the amount of time before the event occurs that you wish to be notified by an alert using the Left and Right navigation keys.
10. To store the event in your calendar, press **SAVE** (⊙). An alert will notify you prior to the event, if you set a notification alert.

Memo Pad

You can create notes and store them in Memo Pad. Return to Memo Pad anytime you wish to review and edit your notes.

Add a Memo

1. In standby mode, press **Menu → Tools → Memo Pad**. If you have any stored memos, they appear as a list in the display. If this is your first time in **Memo Pad**, “No memos” appears in the display.
2. To add a new memo, press the **Add** soft key.
3. Enter memo text using the keypad.
4. When you're finished entering memo text, press ⊙ to save the memo.

Alarm Clock

Your phone has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.

1. In standby mode, press **Menu → Tools → Alarm Clock**.
2. Select an Alarm. A **Set Alarm** screen appears in the display.
3. Highlight the options you wish to change, then select values for the options using the **Left** and **Right** navigation keys.

To enter the Time for the alarm, use the keypad.

4. When you're finished entering and selecting values for the alarm, press **SAVE** (ⓘ). The alarm is set and the alarm icon (🕒) appears in the top of the display.

When an Alarm Sounds

An animated alarm clock appears in the display with the options **Snooze** or **Dismiss**, and an alert sounds when the specified time for the alarm arrives.

- ▶ To silence the alarm, use the Navigation key to select **Dismiss**.

Turn Off the Alarm

Turning off an Alarm stops it from sounding when the set time is reached while retaining the Alarm settings for your reuse.

1. In standby mode, press **Menu → Tools → Alarm Clock**. A list of Alarm Clocks appears in the display.
2. Highlight the Alarm you wish to turn off.
3. Press the **Options** soft key and select **Off**. The highlighted Alarm is turned off, but the alarm settings are retained for later reuse.

Reset the Alarm

Resetting one or all Alarms erases all of your Alarm settings and restores the default settings.

1. In standby mode, press **Menu → Tools → Alarm Clock**.
2. Highlight an Alarm you wish to reset.
3. Press the **Options** soft key and select **Reset Alarm** or **Reset All**. The highlighted Alarm or all active Alarms is (are) turned off.





World Time

World Time lets you view the time of day or night in another part of the world. World Time displays time in the 24 different time zones around the world.

1. In standby mode, press **Menu → Tools → World Time**. A world map appears in the display showing the time in your Home Zone and in a second time zone of your choice.
2. To display the time zone and city that you wish to view, use the **Left** and **Right** navigation keys, or press the **Options** soft key, then select **Go to City** and the preferred city in the alphabetical city list.


Calculator

You can perform calculations, including addition, subtraction, multiplication, and division using your phone.

1. In standby mode, press **Menu → Tools → Calculator**. The **Calculator** appears in the display.
2. Enter the first number in your calculation using the keypad. Numbers can be up to 15 digits long, where a decimal counts as one of the digits.
 - To enter a decimal point, press . Calculator only accepts 5 digits after a decimal point.
 - To change the sign for a number to a negative, press .
3. Use the Navigation key to set the type of calculation that you wish to perform. Your choices are as follows:
4. Use the keypad to enter the next number in your calculation.
5. Repeat steps 3 and 4 as needed.
6. To perform the calculation and view the result, press .
To clear your last operation or number entry, press .
To clear all of your entries, press the **Clear** soft key.

Stop Watch

You can use this menu to set a stop watch.

1. In standby mode, press **Menu → Tools → Stop Watch**.
2. Press  to start, stop, and resume the stopwatch count.
3. Press the **Record** soft key at the start of each succeeding event/lap to record the completion time for the previous event/lap.
4. Press the **Reset** soft key to erase all stop watch (lap) times recorded.

Converter

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. In standby mode, press **Menu → Tools → Converter**.
2. Select the conversion feature you wish to use. The selected conversion feature screen appears in the display with the **From** unit field highlighted.
3. Use the Left and Right navigation keys to select the unit to be converted **From**.
4. Highlight the **From** quantity field.
5. Use the keypad to enter the quantity you want converted in the **From** quantity field.
6. Highlight the **To** unit field.
7. Use the Left and Right navigation keys to select the units to be converted **From** and **To**. The converted quantity appears in the **To** quantity field.

Note: To include a decimal point, press .

Tip Calculator

Tip Calculator automatically calculates the following amounts:

- Gratuity (tip)
- Individual payment (for groups)

Calculations are based on the total amount of the check, a selected percentage, and the number of people paying.

1. In standby mode, press **Menu → Tools → Tip Calculator**. The Tip Calculator screen appears in the display with the **Bill** field highlighted.
2. Use the keypad to enter the total amount of the bill.

Note: To include a decimal point, press the  key.

3. If needed, highlight the **Tip** field and use the keypad to change the tip percentage.
4. If needed, highlight the **# Paying** field and use the keypad to change the number of persons paying.
5. The amount of the Tip, the bill Total, and the amount each person should pay appear in the lower half of the screen.

Section 12: Changing Your Settings

This section explains how to customize your call and phone settings to suit your needs and preferences.

Accessing Your Settings

The **Settings** menu allows you to change settings in the following submenus: location, display, sounds, calls, phone, memory information and phone information.

- In standby mode, press **Menu → Settings**.

Tip: To launch the **Settings** menu using a voice command — In standby mode, press the Voice Command key . The phone prompts, “Say a command.” Say “Go to Settings” into the microphone.

Location

This function identifies your location to the network via the Global Positioning System (GPS). You can set this function for continuous operation or to operate only in the event that you dial 911.

1. In standby mode, press **Menu → Settings → Location**. The following options appear in the display:
 - **Location On** — GPS location is on whenever you make or receive a call, wherever the feature is available.
 - **911 Only** — GPS location is on only when you dial 911.
2. Select the desired Location setting. You are returned to the **Settings** menu.

Display Settings

The Display Settings menu allows you to change the settings for your display wallpaper, the clock format, the display theme, dialing font size, backlight and font contrast.

- ▶ In standby mode, press **Menu → Settings → Display Settings**. The **Display Settings** menu displays.

Note: Prolonged backlight use reduces the time left before your battery requires charging again.

Sound Settings

The Sound Settings menu allows you to change the settings for your master volume, the ringer type, alerts and key tone.

- ▶ In standby mode, press **Menu → Settings → Sound Settings**. The **Sound Settings** menu displays.

Call Settings

The Call Settings menu allows you to change the settings for Call Answer, Call Alert, Auto Answer, Auto Retry, TTY Mode and Voice Privacy.

- ▶ In standby mode, press **Menu → Settings → Call Settings**. The **Call Settings** menu displays.

TTY Mode


Your phone is fully TTY compatible. TTY equipment is connected to your phone through the headset connector on the top of the phone. TTY Mode must be enabled before you can use your phone with a TTY device.

Note: Your phone has a 2.7 mm headset connector. Contact your Wireless Provider to determine whether you need an adapter for your TTY device.

1. In standby mode, press **Menu → Settings → Call Settings → TTY Mode**.
You are prompted to confirm you want to change the current TTY Mode setting.

Note: The “**Enabling TTY may impair headset use and non-TTY accessory performance.**” message pops up when you select **TTY Mode**.

- To access the TTY Mode options, press the **Yes** soft key.
 - To return to the **Call Settings** sub-menu, press the **No** soft key.
2. When you press the **Yes** soft key, the following options appear in the display:
 - **TTY Full** — Enables TTY mode and disables microphone and earpiece.
 - **TTY + Talk** — Enables TTY mode and microphone.
 - **TTY + Hear** — Enables TTY mode and earpiece.
 - **TTY Off** — Disables TTY mode.
 3. Select the desired TTY Mode setting.

Note: The TTY icon () appears in the top of the display when the phone is in standby mode.

Phone Settings

The Phone Settings menu allows you to change the settings for Airplane Mode, Language, Security, System Select, Set Time, Quick Search and Shortcut Key.

- ▶ In standby mode, press **Menu → Settings → Phone Settings**. The **Phone Settings** menu displays.

Memory Info

The Memory Info menu allows you to access your submenus for Memory Usage, My Images, My Ringtones and My Sounds.

- ▶ In standby mode, press **Menu → Settings → Memory Info → Phone Memory**. The **Phone Memory** submenus display.

Phone Info

This section explains Phone Info options that let you identify your assigned phone number, an icon glossary, the software and hardware versions of your phone and the ESN/MEID.

- ▶ In standby mode, press **Menu → Settings → Phone Info**. The **Phone Info** menu displays.